

Equipment	Location	Size	Fuse Label
Accessory Power Outlet System (2400W).	Pass Fuse Box	10A	ECU-IGP NO.2
Active Noise Control (10 Speakers Audio System)	Pass Fuse Box	10A	ECU-IGP NO.2
Active Noise Control (14 Speakers Audio System)	Pass Fuse Box	10A	ECU-IGP NO.2
Active Noise Control (6 Speakers Audio System)	Pass Fuse Box	10A	ECU-IGP NO.2
Air Conditioning	Pass Fuse Box	10A	ECU-IGP NO.2
Air Conditioning	Pass Fuse Box	50A	A/C RR
Air Conditioning	Pass Fuse Box	50A	HTR
Air Conditioning,	Pass Fuse Box	7.5A	ENG-IGR NO.1
Audio System (12.3 Inch Display) (10 Speakers)	Pass Fuse Box	20A	RADIO
Audio System (12.3 Inch Display) (14 Speakers)	Pass Fuse Box	20A	RADIO
Audio System (8 Inch Display) (6 Speakers)	Pass Fuse Box	20A	RADIO
Automatic Glare-Resistant EC Mirror	Dvr Fuse Box	10A	ECU-B
Automatic High Beam System	Dvr Fuse Box	7.5A	ENG-IGR NO.3
Automatic Light Control	Pass Fuse Box	120A	INP STD NO.2
Back Door Opener	Dvr Fuse Box	7.5A	SIREN
Back Door Opener	Dvr Fuse Box	10A	ECU-B
Back Door Opener	Dvr Fuse Box	10A	S-HORN
Back Door Opener	Pass Fuse Box	10A	HORN
Back up Light	Glove Fuse Box	10A	BKUP LP
Blind Spot Monitor System	Pass Fuse Box	120A	INP STD NO.2
Brake Control	Dvr Fuse Box	30A	ABS MAIN NO.1
Brake Control	Dvr Fuse Box	50A	ABS MTR NO.1
Brake Control	Dvr Fuse Box	50A	ABS NO.1
Brake Control	Dvr Fuse Box	50A	ABS NO.2
Brake Control	Dvr Fuse Box	7.5A	ABS MAIN NO.2
Brake Control	Dvr Fuse Box	7.5A	ECU-IGP NO.4
Climate Control Seat (Drv's Seat and Frt Passr's Seat)	Pass Fuse Box	120A	INP STD NO.2
Climate Control Seat (Rear No. 1 Seat)	Dvr Fuse Box	15A	S/HTR R/L
Climate Control Seat (Rear No. 1 Seat)	Dvr Fuse Box	15A	S/HTR R/R
Combination Meter	Pass Fuse Box	20A	METER
Combination Meter	Pass Fuse Box	120A	INP STD NO.2
Cool Box	Pass Fuse Box	10A	ECU-IGP NO.2
Cooling Fan	Dvr Fuse Box	7.5A	FAN NO.1
Cooling Fan	Dvr Fuse Box	50A	EFI MAIN NO.1
Cooling Fan	Pass Fuse Box	120A	RDI FAN
Digital Key System	By 12v Batt	350A	BATT-MAIN NO.1
Digital Key System	Dvr Fuse Box	30A	ST NO.1
Digital Rear-view Mirror	Dvr Fuse Box	10A	ECU-B
Doom Light	Glove Fuse Box	10A	Dome
Door Lock Control	Dvr Fuse Box	7.5A	SIREN
Door Lock Control	Dvr Fuse Box	10A	ECU-B
Door Lock Control	Dvr Fuse Box	10A	S-HORN
Door Lock Control	Pass Fuse Box	10A	HORN
ECT and Shift Indicator	Dvr Fuse Box	7.5A	EFI NO.2
ECT and Shift Indicator	Dvr Fuse Box	7.5A	EFI-IGP
ECT and Shift Indicator	Dvr Fuse Box	7.5A	ENG-IGR NO.2

ECT and Shift Indicator	Dvr Fuse Box	20A	EFI-B NO.1
ECT and Shift Indicator	Dvr Fuse Box	20A	EFI-B NO.2
ECT and Shift Indicator	Dvr Fuse Box	50A	EFI MAIN NO.1
ECT and Shift Indicator	Dvr Fuse Box	50A	OIL PMP
ECT and Shift Indicator	Dvr Fuse Box	7.5A	ECT-B
ECT and Shift Indicator	Dvr Fuse Box	7.5A	ECT-IGP
ECT and Shift Indicator	Dvr Fuse Box	15A	ECT NO.1
Engine Control	Dvr Fuse Box	7.5A	E-ACM
Engine Control	Dvr Fuse Box	10A	EFI NO.3
Engine Control	Dvr Fuse Box	10A	INJ
Engine Control	Dvr Fuse Box	20A	EDU NO.1
Engine Control	Dvr Fuse Box	20A	EDU NO.2
Engine Control	Dvr Fuse Box	20A	EDU NO.3
Engine Control	Dvr Fuse Box	20A	EDU NO.4
Engine Control	Dvr Fuse Box	20A	EFI-B NO.1
Engine Control	Dvr Fuse Box	20A	EFI-B NO.2
Engine Control	Dvr Fuse Box	20A	IGT /INJ MAIN
Engine Control	Dvr Fuse Box	25A	EFI MAIN NO.3
Engine Control	Dvr Fuse Box	30A	EFI MAIN NO.2
Engine Control	Dvr Fuse Box	50A	EDU
Engine Control	Dvr Fuse Box	50A	EFI MAIN NO.1
Engine Control	Pass Fuse Box	40A	IGCT NO.1
Engine Control	Dvr Fuse Box	7.5A	EFI NO.1
Engine Control	Dvr Fuse Box	7.5A	EFI NO.2
Engine Control	Dvr Fuse Box	7.5A	EFI-IGP
Engine Control	Dvr Fuse Box	7.5A	ENG-IGR NO.2
Engine Control	Dvr Fuse Box	10A	A/F NO.1
Engine Control	Dvr Fuse Box	10A	A/F NO.2
Engine Control	Pass Fuse Box	7.5A	IGCT NO.4
Engine Control	Pass Fuse Box	10A	ECU-IGP NO.2
Engine Immobiliser System	By 12v Batt	350A	BATT-MAIN NO.1
Engine Immobiliser System	Dvr Fuse Box	30A	ST NO.1
Four Wheel Drive Control	Dvr Fuse Box	30A	4WD-IGR
Four Wheel Drive Control	Dvr Fuse Box	7.5A	4WD-B
Front Wiper and Washer	Pass Fuse Box	15A	WASHER
Front Wiper and Washer	Pass Fuse Box	30A	WIPER
Fuel Door Open Solenoid	Glove Fuse Box	10A	FUEL OPN
Fuel Lid Opener	Dvr Fuse Box	50A	EFI MAIN NO.1
Fuel Lid Opener	Dvr Fuse Box	7.5A	EFI NO.1
Garage Door Opener	Dvr Fuse Box	10A	ECU-B
Glass Hatch Opener	Pass Fuse Box	7.5A	P/W BACK
Grille Shutter	Dvr Fuse Box	25A	EFI MAIN NO.3
Grille Shutter	Dvr Fuse Box	7.5A	GRILL SHUTTER
Headlight	Dvr Fuse Box	7.5A	ENG-IGR NO.3
Heated Steering Wheel System	Dvr Fuse Box	15A	STRG ECU
Horn	Pass Fuse Box	10A	HORN
Hybrid system	By 12v Batt	7.5A	BATT-S NO.1

Hybrid system	By 12v Batt	7.5A	BATT-S NO.2
Hybrid system	By 12v Batt	15A	BATT-FAN MAIN NO.1
Hybrid system	By 12v Batt	15A	BATT-FAN MAIN NO.2
Hybrid System	Dvr Fuse Box	7.5A	ECU-IGP NO.3
Hybrid System	Pass Fuse Box	40A	IGCT NO.1
Hybrid System	Pass Fuse Box	150A	DC/DC
Hybrid System	Pass Fuse Box	7.5A	ENG-IGR NO.1
Hybrid System	Pass Fuse Box	7.5A	IGCT NO.2
Hybrid System	Pass Fuse Box	7.5A	IGCT NO.3
Hybrid System	Pass Fuse Box	7.5A	IGCT NO.5
Hybrid System	Pass Fuse Box	7.5A	INV W/PMP NO.2
Hybrid System	Pass Fuse Box	7.5A	PM IGCT
Hybrid System	Pass Fuse Box	10A	ECU-IGP NO.2
Hybrid System	Pass Fuse Box	10A	INV W/PMP NO.1
Hybrid System	Pass Fuse Box	10A	PCU
Ignition	Dvr Fuse Box	10A	IGN
Ignition	Dvr Fuse Box	20A	IGT /INJ MAIN
Illumination	Pass Fuse Box	120A	INP STD NO.2
Interior Light	Dvr Fuse Box	10A	ECU-B
Interior Light	Pass Fuse Box	100A	INP STD NO.1
Light Auto Turn Off System	Pass Fuse Box	120A	INP STD NO.2
Mirror Heater (w/o Seat Position Memory)	Pass Fuse Box	100A	INP STD NO.1
Multiplex Communication System (CAN)	Pass Fuse Box	10A	ECU-IGP NO.2
Multiplex Communication System (CXPI)	Pass Fuse Box	15A	WASHER
Multiplex Communication System (CXPI)	Pass Fuse Box	20A	ENG P/I NO.1
Multiplex Communication System (CXPI)	Pass Fuse Box	20A	ENG P/I NO.2
Multiplex Communication System (CXPI)	Pass Fuse Box	30A	WIPER
Multiplex Communication System (CXPI)	Pass Fuse Box	80A	INP STD-B
Multiplex Communication System (CXPI)	Pass Fuse Box	100A	INP STD NO.1
Multiplex Communication System (CXPI).	Pass Fuse Box	120A	INP STD NO.2
MultiRlex Communication System (CXPI)	Pass Fuse Box	7.5A	ENG-IGR NO.1
Navigation System (12.3 Inch Display) (10 Speakers)	Pass Fuse Box	20A	RADIO
Navigation System (12.3 Inch Display) (14 Speakers)	Pass Fuse Box	20A	RADIO
Navigation System (8 Inch Display)	Pass Fuse Box	20A	RADIO
Power Back Door	Pass Fuse Box	30A	PBD
Power Integration System	Pass Fuse Box	80A	INP STD-B
Power Integration System	Pass Fuse Box	7.5A	ENG-IGR NO.1
Power Integration System	Pass Fuse Box	15A	WASHER
Power Integration System	Pass Fuse Box	20A	ENG P/I NO.1
Power Integration System	Pass Fuse Box	20A	ENG P/I NO.2
Power Integration System	Pass Fuse Box	30A	WIPER
Power Integration System	Pass Fuse Box	100A	INP STD NO.1
Power Integration System	Pass Fuse Box	120A	INP STD NO.2
Power Source	Dvr Fuse Box	25A	IGP MAIN NO.2
Power Source	Dvr Fuse Box	40A	IGR MAIN NO.4
Power Source	Pass Fuse Box	25A	IGP MAIN NO.1
Power Source	Pass Fuse Box	25A	IGP MAIN NO.3

Power Source	Pass Fuse Box	30A	D/C CUT
Power Source	Pass Fuse Box	200A	SUB R/B
Power Source	Dvr Fuse Box	7.5A	ECU-IGP NO.6
Power Steering System	Pass Fuse Box	80A	EPS NO.1
Rear View Monitor System	Pass Fuse Box	20A	RADIO
Rear Window Defogger	Pass Fuse Box	100A	INP STD NO.1
Rear Wiper and Washer	Pass Fuse Box	15A	WASHER
Rear Wiper and Washer	Pass Fuse Box	30A	WIPER
Remote Control Mirror (w/o Seat Position Memory)	Pass Fuse Box	100A	INP STD NO.1
Seat Heater (Drv's Seat and Frt Pass Seat)	Pass Fuse Box	120A	INP STD NO.2
Seat Heater (Rear No. 1 Seat)	Dvr Fuse Box	15A	S/HTR R/L
Seat Heater (Rear No. 1 Seat)	Dvr Fuse Box	15A	S/HTR R/R
Seat Heater Front/Left	Glove Fuse Box	15A	S/HTR F/L
Seat Heater Front/Right	Glove Fuse Box	15A	S/HTR F/R
Shift Lock	Pass Fuse Box	7.5A	ECU-IGP NO.1
Sliding Roof	Dvr Fuse Box	10A	ECU-B
Smart Key System	By 12v Batt	350A	BATT-MAIN NO.1
Smart Key System	Dvr Fuse Box	30A	ST NO.1
Stabilizer with Disconnection Mechanism	Dvr Fuse Box	10A	STB-B
Stop Light	Pass Fuse Box	10A	ECU-IGP NO.2
Taillight	Dvr Fuse Box	7.5A	ENG-IGR NO.3
Taillight	Pass Fuse Box	120A	INP STD NO.2
Theft Deterrent	Dvr Fuse Box	7.5A	SIREN
Theft Deterrent	Dvr Fuse Box	10A	ECU-B
Theft Deterrent	Dvr Fuse Box	10A	S-HORN
Theft Deterrent	Pass Fuse Box	10A	HORN
Trailer Brake Control System	Dvr Fuse Box	7.5A	TOWING-IGR
Trailer Brake Control system	Pass Fuse Box	7.5A	ENG-IGR NO.1
Trailer Brake Control System	Pass Fuse Box	10A	TOWING BK/UP
Trailer Brake Control System	Pass Fuse Box	30A	TOWING
Trailer Brake Control System	Pass Fuse Box	30A	TOWING BRK
Trailer Brake Control System	Pass Fuse Box	30A	TOWING TAIL
Trailer Brake Control System	Pass Fuse Box	40A	SUB BATT
Trailer Towing	Pass Fuse Box	7.5A	ENG-IGR NO.1
Trailer Towing	Pass Fuse Box	10A	TOWING BK/UP
Trailer Towing	Pass Fuse Box	30A	TOWING
Trailer Towing	Pass Fuse Box	30A	TOWING BRK
Trailer Towing	Pass Fuse Box	30A	TOWING TAIL
Trailer Towing	Pass Fuse Box	40A	SUB BATT
Trailer Towing	Dvr Fuse Box	7.5A	TOWING-IGR
Unused in USA variant	By 12v Batt	200A	BATT-MAIN (unused)
Windshield Deicer	Pass Fuse Box	15A	DEICER
Windshield Deicer	Pass Fuse Box	7.5A	ENG-IGR NO.1
Wiper Rear	Glove Fuse Box	15A	WIPER RR
Wireless Charger System	Dvr Fuse Box	10A	ECU-B
Wireless Door Lock Control	Dvr Fuse Box	30A	ST NO.1
Wireless Door Lock Control	By 12v Batt	350A	BATT-MAIN NO.1

Glove Fuse Box	5A	+BA NO.1
Glove Fuse Box	5A	+BA NO.2
Glove Fuse Box	20A	DOOR R/R
Glove Fuse Box	20A	DOOR R/L
Glove Fuse Box	10A	ECU-B NO.3
Glove Fuse Box	10A	DOOR BACK
Glove Fuse Box	7.5A	OBD
Glove Fuse Box	20A	DOOR F/R
Glove Fuse Box	20A	DOOR F/L
Glove Fuse Box	15A	D/L
Glove Fuse Box	10A	ECU-DCC NO.2
Glove Fuse Box	10A	ECU-DCC NO.1
Glove Fuse Box	10A	ECU-DCC NO.3
Glove Fuse Box	10A	HAZ
Glove Fuse Box	10A	TAIL
Glove Fuse Box	5A	PANEL
Glove Fuse Box	10A	ECU-IGR NO.2
Glove Fuse Box	5A	EPS-IGR
Glove Fuse Box	10A	EPS-IGR NO.1
Glove Fuse Box	10A	A/BAG-IGR
Glove Fuse Box	10A	ECU-IGR NO.3
Glove Fuse Box	5A	ECU-B NO.1
Glove Fuse Box	10A	ECU-IGR NO.2
Glove Fuse Box	10A	STOP
Glove Fuse Box	10A	ECU-ACC
Glove Fuse Box	15A	STRG LOCK
Glove Fuse Box	7.5A	AM2
Glove Fuse Box	7.5A	DCM
Glove Fuse Box	30A	TI&TE
Glove Fuse Box	30A	AMP NO.1
Glove Fuse Box	10A	ECU-IGR NO.4
Glove Fuse Box	5A	METER-IGR
Glove Fuse Box	15A	P/OUTLET NO.1
Glove Fuse Box	25A	DOOR DBL/L
Glove Fuse Box	10A	USN NO.1
Glove Fuse Box	5A	SFT LOCK-ACC