

# **TOYOTA LAND CRUISER**


5 doors / 5 seats or 7 seats / wagon MY: 2024 -










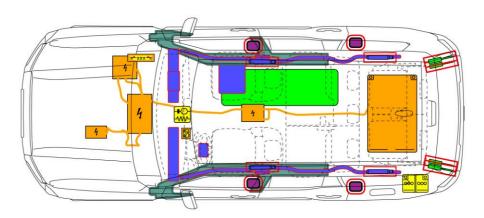

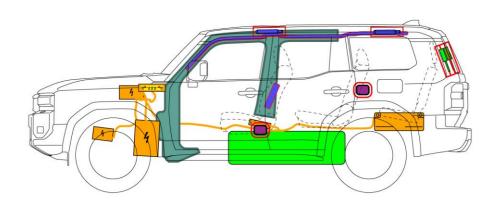


ID No.  LANDCRUISERHV250		Version No.		Version date 02 / 2024		Page 1 / 4			
				.,		., .		_	
	Battery pack, high-voltage	1	power cable / component						
	Preloaded spring		strength zone High voltage	000000	Battery low voltage	<b>%</b>	device that disconnects high voltage	x* xxx	Cable cut
	Airbag  Gas strut /		Stored gas inflator High		pretensioner		SRS control unit	K	Fuel tank
		A	Stored gas		Seat belt				


## 1. Identification / Recognition



Lack of engine noise does not mean vehicle is off. Silent movement or instant restart capability exists until vehicle is fully shut down.

#### ■ Location of vehicle badges

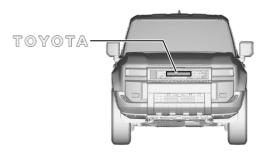

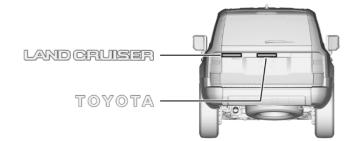


■ Energy source: Nickel-metal hydride battery




## 2. Immobilisation / Stabilisation / Lifting

#### ■ Completely immobilize the vehicle

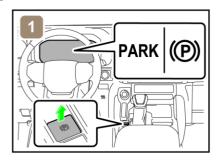


1) Chock the wheels and engage the parking brake.

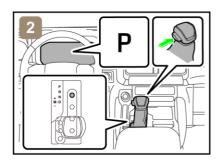

2) Move the shift lever to the park (P) position.

#### ■ Stabilisation-lifting point

Place cribbing such as wooden blocks at the four points under the front and rear pillars.

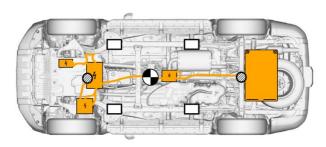

Extra Reinforced Lifting Points

☐ Standard Jack Locations



Vehicle Center of Gravity



Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system, fuel system or high voltage power cables. Doing so may result in fuel leaks, fire or electric shock.

ID No.	Version No.	Version date	Page
LANDCRUISERHV250	01	02 / 2024	2/4

## 3. Disable direct hazards / Safety regulations

If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock Power window Power seat


Power tilt and telescopic steering Electric parking brake Power back door

Sliding roof

When the 12 V battery is disconnected, electrical components cannot be operated.


■ Perform procedure Main or Alternative to completely shut off the vehicle.

<Main Procedure>

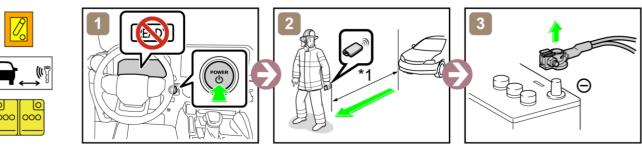


\*1: 5 m (16.4 ft) or more

<Alternative Procedure>

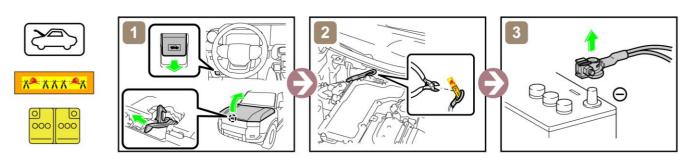


In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated.

#### ■ Access to 12 V Battery

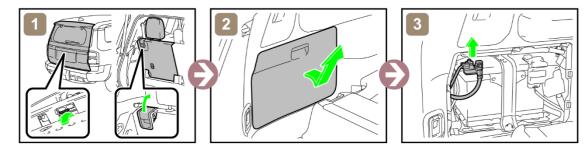

## 4. Access to the occupants

#### **■ Window Glass**

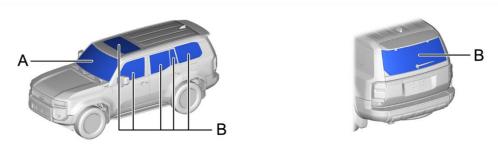

Α	Laminated	В	Tempered
---	-----------	---	----------

ID No.	Version No.	Version date	Page
LANDCRUISERHV250	01	02 / 2024	3 / 4

### 5. Stored energy / Liquids / Gases / Solids



High Voltage Ni-MH Battery



12 V Battery



Gasoline Tank: 68 L















- Always wear appropriate personal protective equipment (PPE) when dealing with any of these items.
- Never breach or remove the battery assembly cover under any circumstances, including fire. Doing so may result in serious injury or death from severe burns or electric shock.

#### 6. In case of fire



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



**RE-IGNITION POSSIBLE!** 














### 7. In case of submersion





Do not touch any of the high-voltage components or cables, including the service plug, while the vehicle is submerged. Doing so may result in electric shock.

Work on the vehicle only after the vehicle has been pulled out of the water.

## 8. Towing / Transportation / Storage

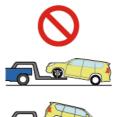

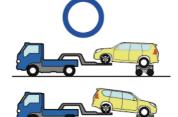

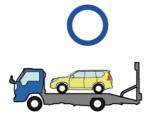



**RE-IGNITION POSSIBLE!** 

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

## 9. Important additional information

For further details, please refer to "Emergency Response Guide". http://www.techinfo.toyota.com

ID No.	Version No.	Version date	Page
LANDCRUISERHV250	01	02 / 2024	4/4